

Mono-Systems, Inc.
AdvanceWay™

SCALE: NONE

PART # AW33EC-* END CAP


(ADD "-A" SUFFIX TO SPECIFY ALMOND)
(ADD "-W" SUFFIX TO SPECIFY WHITE)

Assembly Instructions




- 1) End cap has knockouts to accommodate four 1/2" conduits. Cut KO's using a sharp knife prior to removal. Push out knock outs using a 0.85" round metal dowel with a hammer or use a knockout punch kit.
- 2) Slide end cap onto AdvanceWay base and installed 2 supplied screws thru the AdvanceWay end cap holes penetrating the AdvanceWay base. Supplied screws are the proper length as not to penetrate thru the protective legs on the inside of the end cap as shown.

- 4) Install Covers into the AdvanceWay base.

Material :ABS

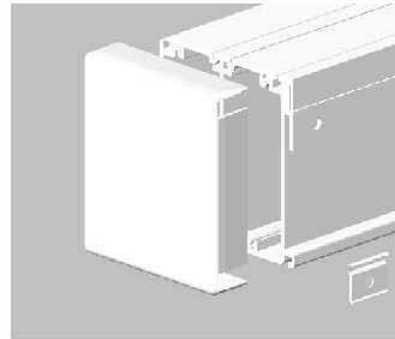

AW33EC-*

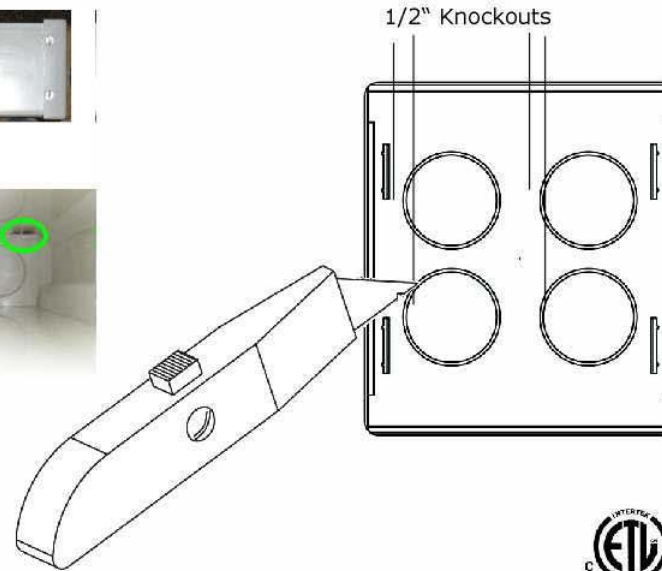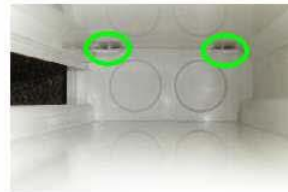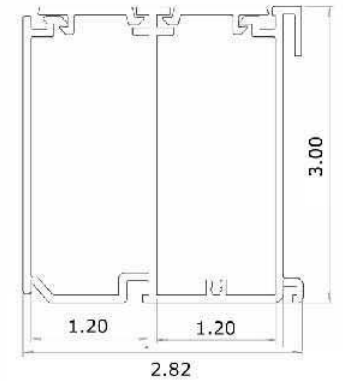

MONO-SYSTEMS, INC.
UNIQUE CABLE DISTRIBUTION SOLUTIONS
4 INTERNATIONAL DRIVE
RYE BROOK, NEW YORK 10573
PHONE: (914)-934-2075
FAX: (914)-934-2190